Alarm Clock MP3 Instructions

MUSIC   5

MODE   FWD

1

12:27:44 A
Alrm On:12:20A
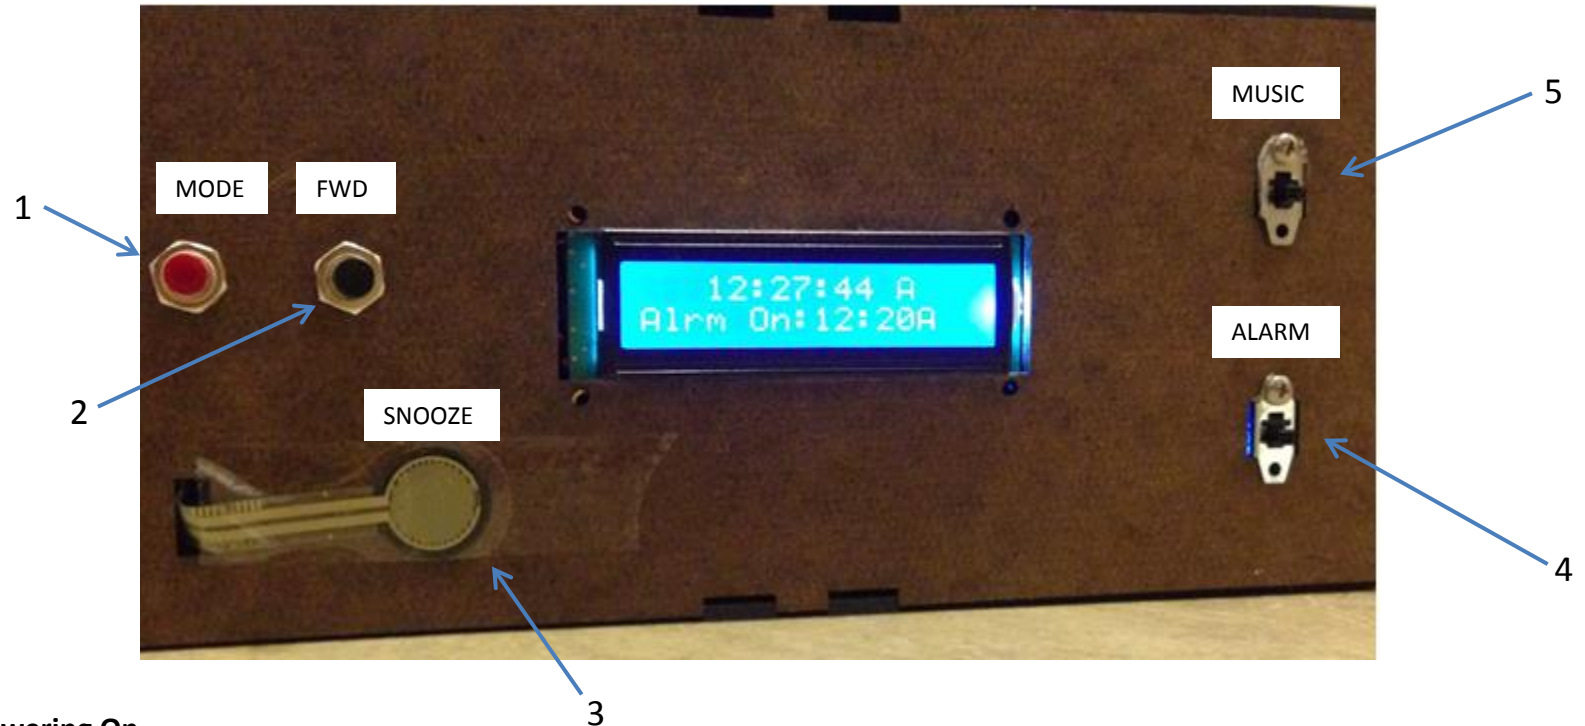
ALARM

2

SNOOZE

4

3

Powering On

Plug in the USB cable with the AC adapter into a power source, like a standard household outlet. The current time should display.

Setting the Alarm

Press MODE (1) once to enable Hours setting. After about 10 seconds press the FWD (2) button to increment the Hours. After each press wait about 5 seconds. When correct Hour time is reached, press MODE (1). Wait 10 seconds, then press FWD (2) to increment the Minutes, waiting 5 seconds after each press. When correct Minute time is reached, wait for 10 seconds and slide the ALARM (4) switch until it displays "Alrm On:" and your set alarm time (see picture above).

Using the Alarm

When the alarm time is reached, the MP3 player will begin playing all the songs in the directory. Pressing SNOOZE (3) will stop the music and restart it at the next minute. To stop the alarm, slide the ALARM (4) switch to OFF.